

Included Parts



Ethernet cables not included.

Access Point

DC PoE Injector (Power over Ethernet)

Instructions

Follow the steps below and refer to the diagram on page 2:

- **1** Power off the CloudBox.
- **2** Connect an ethernet cable between the CloudBox and the IN port on the PoE injector. (For CloudBox 2, connect the ethernet cable to Ethernet Port 2)
- **3** Connect another ethernet cable between the OUT port on the PoE injector and the Access Point.
- 4 Connect the VIN+ to 12VDC+ and connect the VIN- to ground (DC-).
- **5** Power on the CloudBox and PoE injector.

Diagram

