


STEP 1:

Turn off power to the CloudBox.

STEP 2:

Disconnect the old antenna from the circuit board.

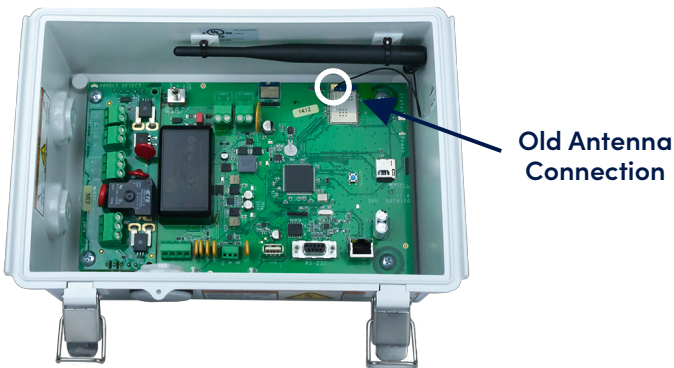

STEP 3:

Connect the uFL to SMA adapter to the circuit board.




STEP 4:

Connect the SMA cable to the SMA adapter.



STEP 5:

Run the SMA cable out of the CloudBox and to the desired location of the antenna. The new antenna location should be in clear line of sight to where the driver will be fueling.

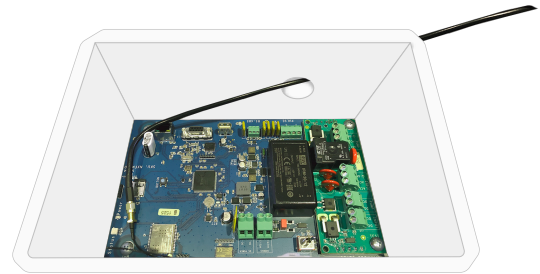

STEP 6:

Connect the extension antenna to the SMA cable.



STEP 7:

Mount the antenna to a wall, post, or available service.

STEP 8:

Turn power back on to the CloudBox.

STEP 9:

Run a transaction to confirm that the antenna extension is working.